



Protecto Wrap Specifiers Guide	Parapet flashing system Plaster finish Protecto Tape - EIFS Tape (Installation Steps)	CAD Ref: PW02.1	Sheet : 03.1.4
		Date : April 2005	
		Revision :	

Technical specification subject to change without notice

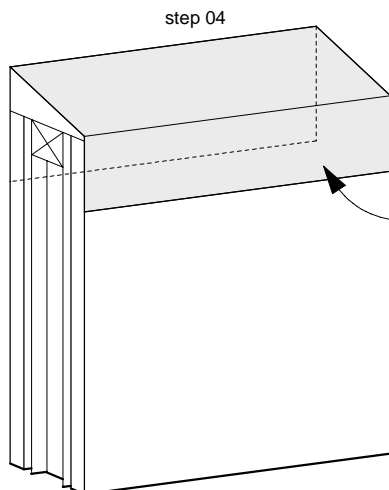

step 04


Install Protecto Tape - (EIFS tape)
(Extend 55mm minimum beyond top plate)

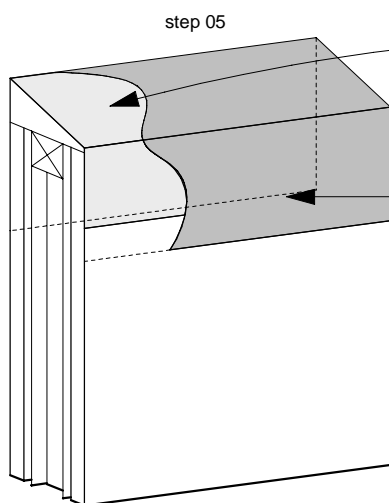

step 05

Protecto Tape - (EIFS tape) installed from
previous step
Reinforcing is to extend beyond Protecto
tape - EIFS tape

Plaster 2 layers of reinforcing fibreglass
mesh over surface of Protecto tape - (EIFS
tape). Extend 50mm beyond extent of
Protecto tape - (EIFS tape)

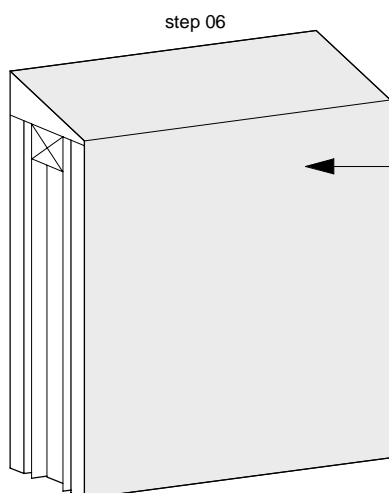

step 06

Plaster finish reinforced with
fibreglass mesh. Installed by others
in accordance with manufacturers
specifications.

Note:

- Protecto Wrap products are designed to be covered and are therefore not UV stable - cover within four weeks of installation.
- Do not use #80 Primer on polystyrene replace with Protecto Tak Primer

Protecto Wrap Specifiers Guide	Parapet flashing system Plaster finish Protecto Tape - EIFS Tape (Installation Steps) <small>Technical specification subject to change without notice</small>	CAD Ref: PW02.1	Sheet : 03.1.5
		Date : April 2005	
		Revision :	