



Working with falls 1:100 minimum falls for wet areas outside of the shower

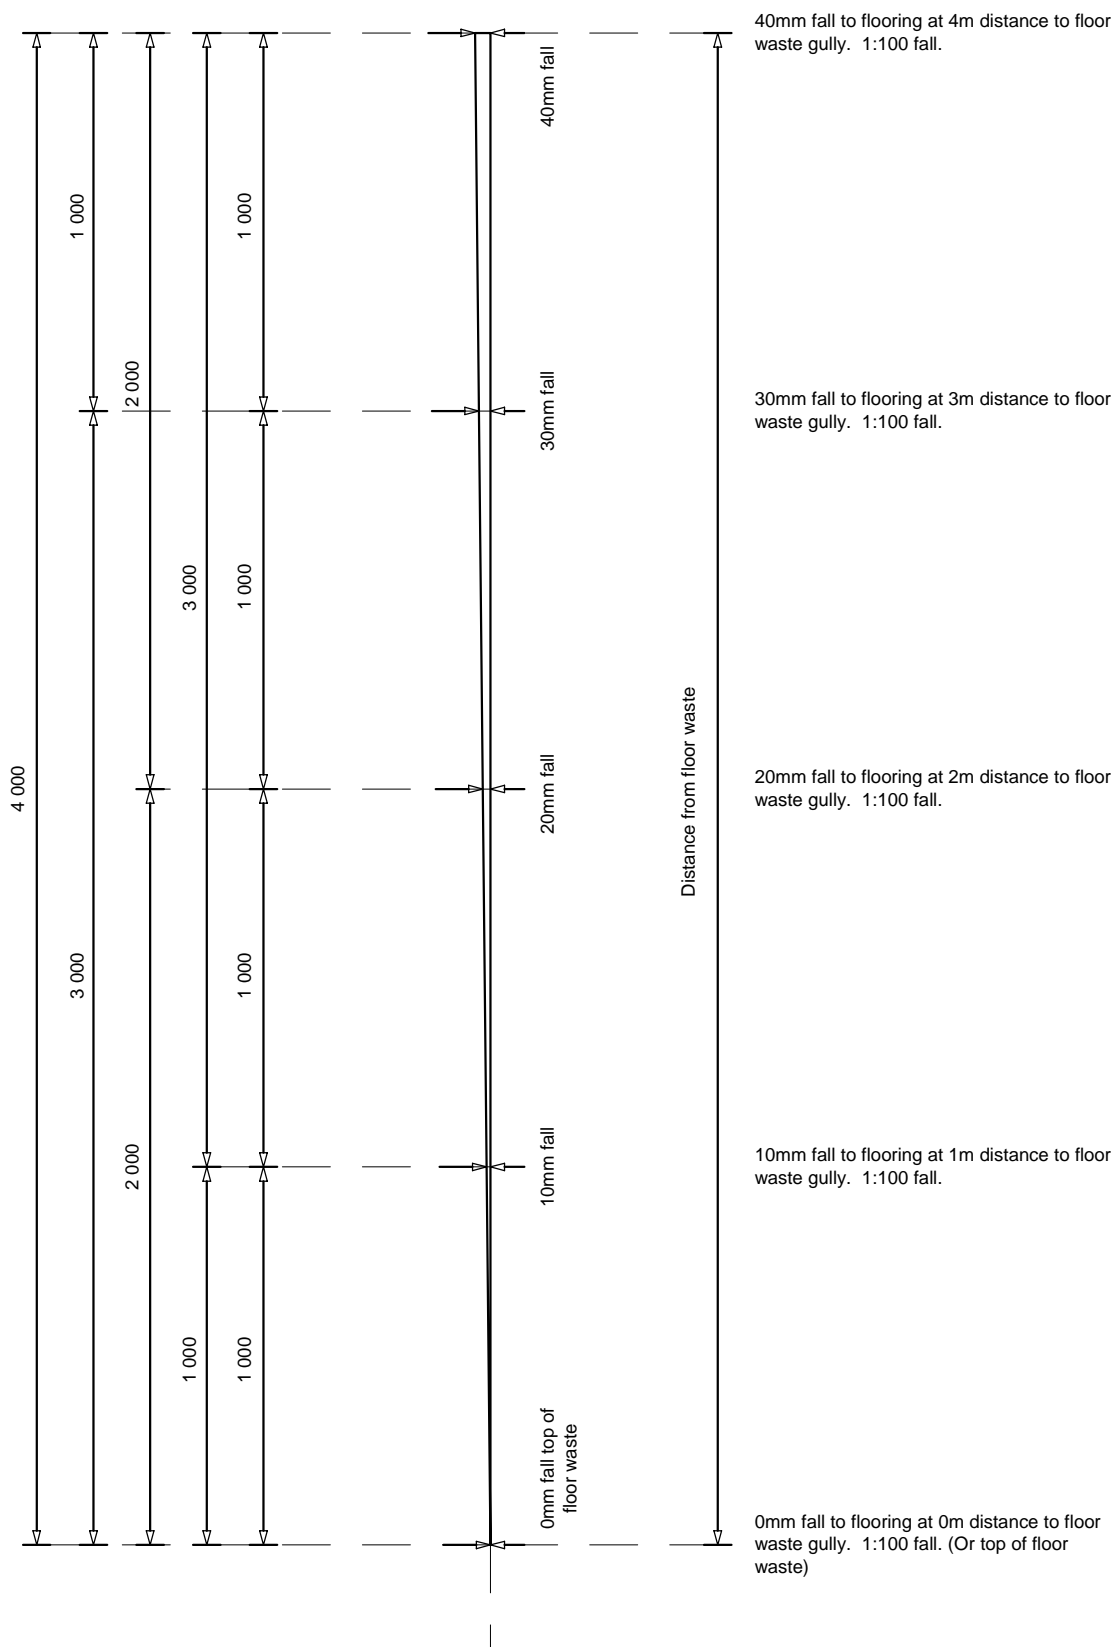


Protecto Wrap Specifiers Guide	Tile Gradient Setout Guide AFM 500 Detail Tape / AFM-WM Anti Fracture and Waterproof Membrane (Set distance to a 1:100 ratio) <small>Technical specification subject to change without notice</small>	CAD Ref: PW06.8	Sheet : 06.8.1
		Date : April 2005	
		Revision :	

Working with falls 1:80 floor tiling for shower bathroom areas

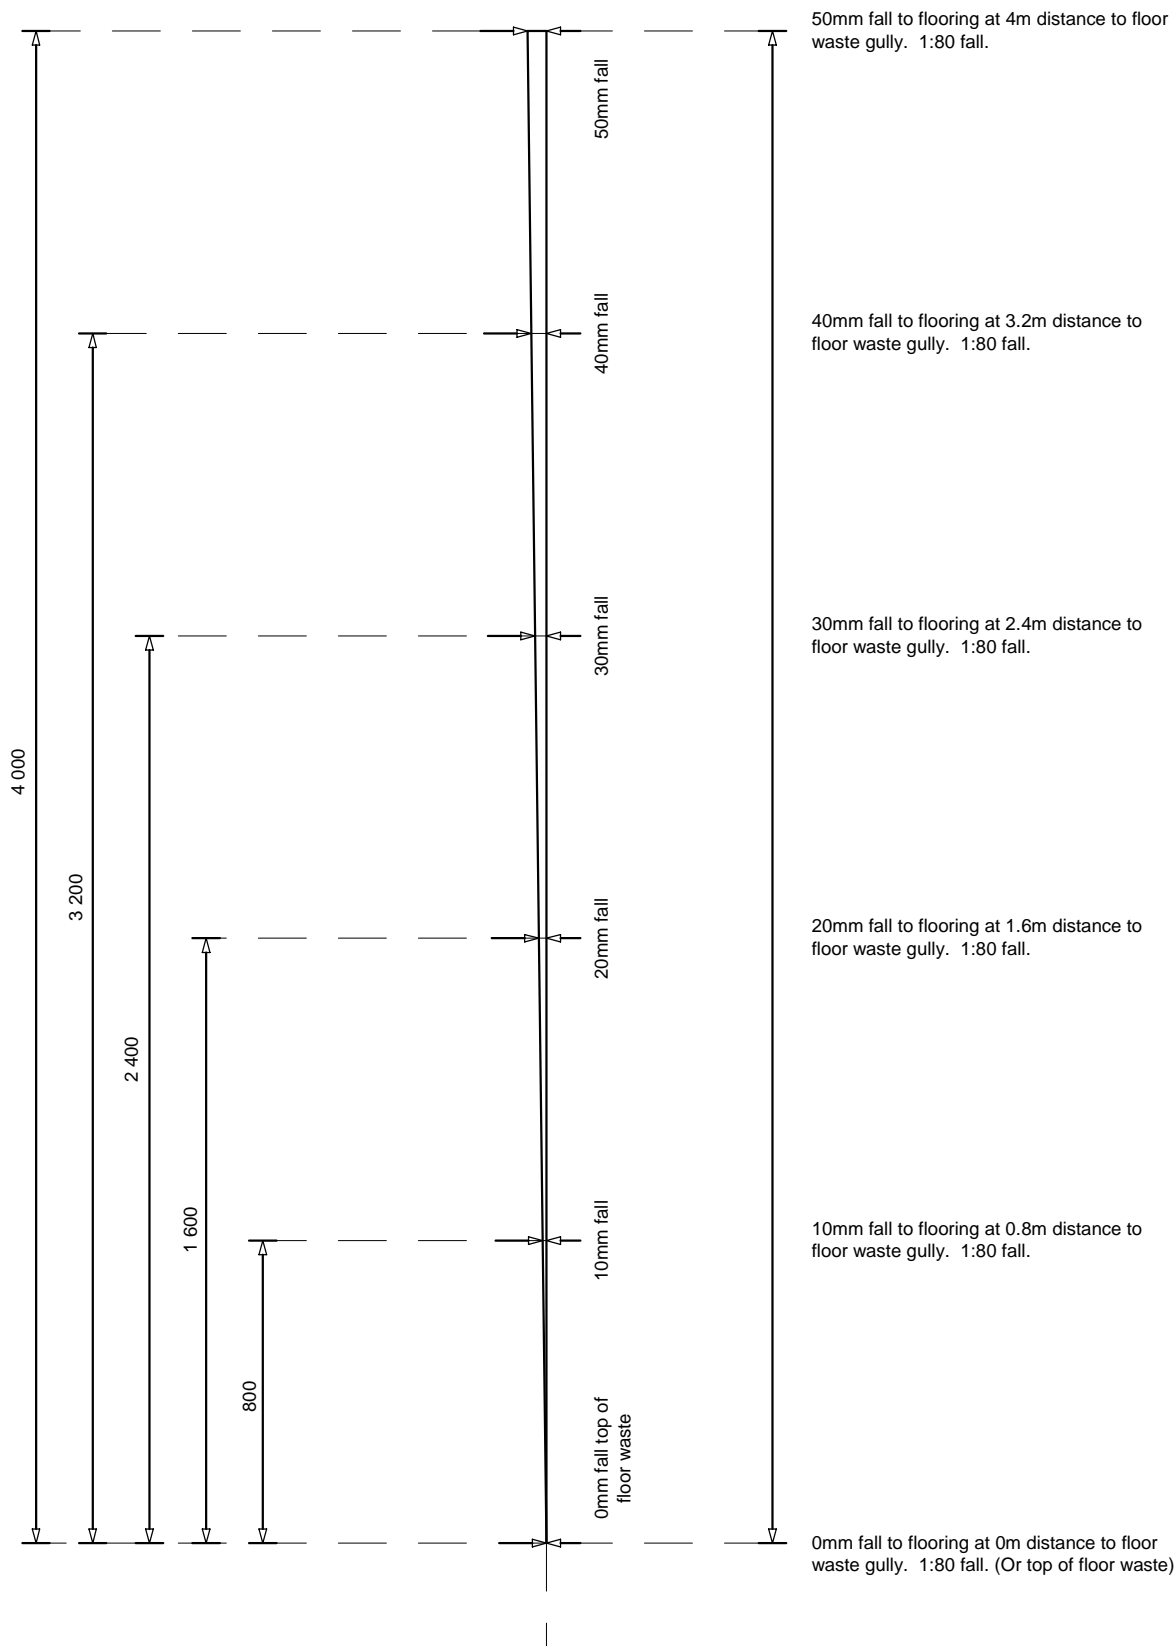

Protecto Wrap Specifiers Guide	Tile Gradient Setout Guide AFM 500 Detail Tape / AFM-WM Anti Fracture and Waterproof Membrane (Set distance to a 1:80 ratio) <small>Technical specification subject to change without notice</small>	CAD Ref:	PW06.8	Sheet : 06.8.2
		Date :	April 2005	
		Revision :		

Working with falls 1:50 topping floor in mobility impaired wet area topping floors in shower areas, tiling shower floor

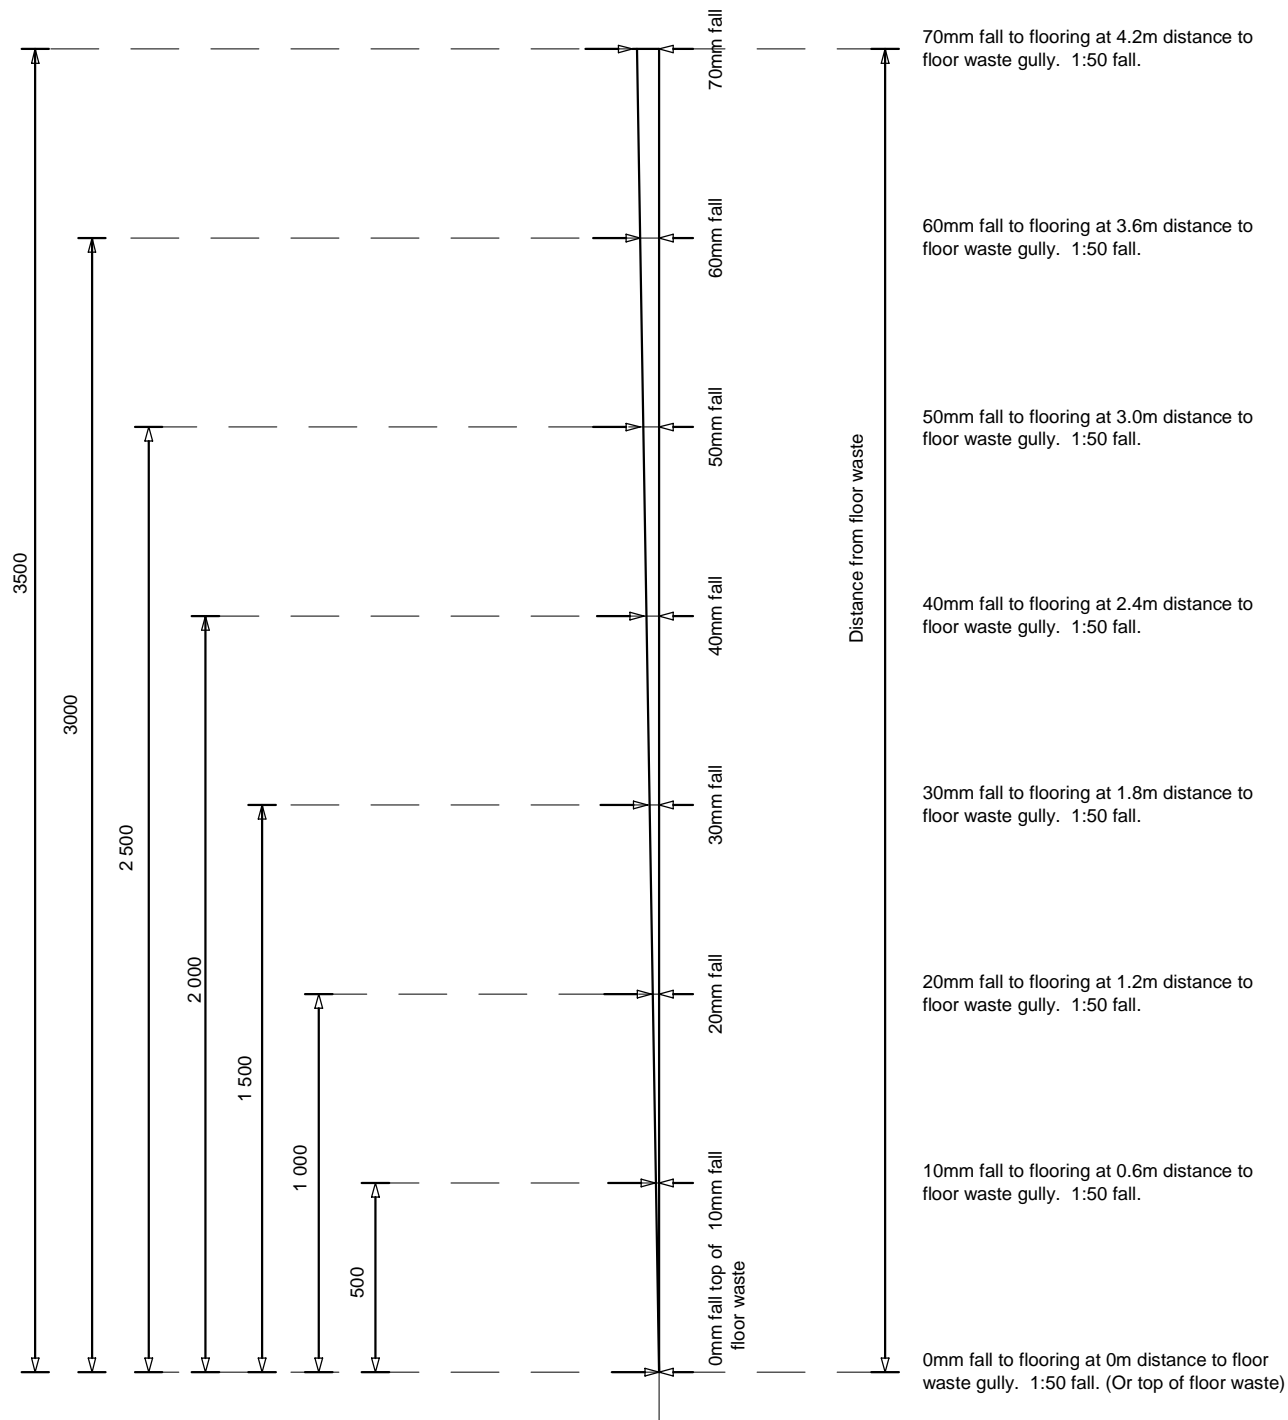

Protecto Wrap Specifiers Guide	Tile Gradient Setout Guide AFM 500 Detail Tape / AFM-WM Anti Fracture and Waterproof Membrane (Set distance to a 1:60 ratio) <small>Technical specification subject to change without notice</small>	CAD Ref:	PW06.8	Sheet : 06.8.3
		Date :	April 2005	
		Revision :		